

MED-4735

High consistency silicone elastomer

DESCRIPTION

- Two-part, high tear strength silicone elastomer
- Soft silicone
- Cures with heat via addition-cure chemistry
- Has a non-tacky surface and no volatile by-products or peroxide residues
- Strained through a 400-mesh screen (minimum)
- 1:1 Mix Ratio (Part A: Part B)

APPLICATION

- For a wide variety of fabrication techniques for the medical device industry including: molding, calendaring and extruding

NuSil™ MED-4735 may be considered for use in human implantation for a period of greater than 29 days.

PROPERTIES

Typical Properties	Average Result	Standard	NT-TM
Uncured:			
Appearance	Translucent	ASTM D2090	002
Plasticity, Part A	70 mils (1.8 mm)	ASTM D926	058
Plasticity, Part B	65 mils (1.6 mm)	ASTM D926	058
Work Time	2.0 hours	-	074
Cured: 10 minutes at 116°C (241°F). Stabilize for 24 hours minimum at ambient temperature and humidity			
Specific Gravity	1.11	ASTM D792	003
Durometer, Type A	35	ASTM D2240	006
Tensile Strength	1,535 psi (10.6 MPa)	ASTM D412	007
Elongation	1,055%	ASTM D412	007
Tear Strength	195 ppi (34.4 kN/m)	ASTM D624	009
Stress at 200% Strain	180 psi (1.2 MPa)	ASTM D412	007

MED-4735 27 November 2018 Rev. C

Polymer Systems Technology Limited

Unit 2, Network 4, Lincoln Road, Cressex Business Park, High Wycombe, Buckinghamshire, HP12 3RF

www.silicone-polymers.com

Tel: +44 (0) 1494 446610

Email: sales@silicone-polymers.co.uk

BIOMATERIALS IMPLANT LINE

Typical Properties	Average Result	Standard	NT-TM
Tissue Culture (Cytotoxicity Testing)	Pass	USP <87> ISO 10993-5	061
Elemental Analysis of Trace Metals	Pass	ASTM E305	131

The above properties are tested on a lot-to-lot basis. Do not use as a basis for preparing specifications. Please contact us for assistance and recommendations in establishing particular specifications.

INSTRUCTIONS FOR USE

Combine Part A and Part B in equal portions on a two-roll mill prior to use. Take care to work in a meticulously clean area with no organic rubbers used on the same equipment, as traces of foreign materials can poison the catalyst, thus inhibiting the cure. Thoroughly clean all equipment at the end of each use to avoid build-up of cured stock. The next material used on unclean equipment may pick-up residue, resulting in "gels" and imperfections.

Recommended Equipment:

https://www.silicone-polymers.com/PST_Roll_Mills_Overview.php

Blending

First soften Part B on a cooled two-roll mill. Remove from the mill and soften Part A. Add an equal portion by weight of softened Part B and cross blend the components until thoroughly mixed. Keep the temperature of the blended material as low as possible to give maximum table life. Blend only sufficient material required for use in within 2 to 3 hours. Blended material may be stored in a freezer for at least 7 days if carefully wrapped. Warm material stored in a freezer to room temperature before unwrapping to avoid condensation on the elastomer, which may cause voids in molded or extruded parts.

Molding

This product can be formed into cured configurations by compression, transfer or injection molding processes. Molding cycle times are dependent on the mold temperature and cross-sectional thickness of the part. It is best to use highly polished, chrome-plated or stainless steel molds for these operations. Other polished metals will normally require release agents to prevent sticking. If using release agents, clean the molded parts prior to use.

Calendering

Calender the elastomer into sheeting with or without reinforcement. Make sheeting by calendering onto a laminate such as Mylar™ or polyethylene, for vulcanized and unvulcanized sheeting, respectively. If using Mylar™, strip off the Mylar™ after vulcanization while the sheet is still hot. If using polyethylene, strip off the polyethylene before vulcanization. Long lengths of Mylar™ laminated sheeting can be calendered on a core and vulcanized in a hot air oven or steam autoclave.

Packaging

2 Pound Kit (900 g)
10 Pound Kit (4.54 kg)
50 Pound Kit (22.68 kg)

Warranty

12 Months

Extrusion

For maximum uniformity, re-soften the elastomer on a two-roll mill at time of use. Extrude the elastomer through an unheated die to make rod, tubing and coated wire. Vulcanize after extrusion by passing the material through a horizontal or vertical heated chamber. The residence time will vary based on the temperature of the chamber and the size/thickness of the extrusion.


SILICONE TWO-ROLL MILLS

Quality Meets Safety in HCR Processing

Introducing the newest innovations in HCR material processing, which range from compact manual sampling benchtop rollers to large-scale production machines. With safety as our highest priority, our newest enhancements include **advanced safety features** for operator protection, a multilingual **interactive display screen** for ease of use, new **backlit rollers** for improved visibility, and a **digital milling thickness gauge**. Discover the ideal combination of safety and efficiency with this reliable and precise equipment, an indispensable addition to elevate your production process.

Safety Features:

- Dual-guarded roller opening
- Light Curtain
- Emergency Stop Button
- Reverse operation via two hand control
- Machine running state via LED

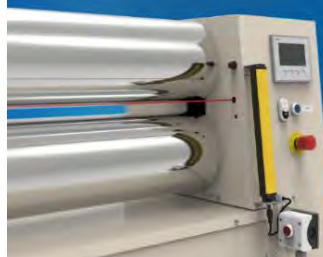

Polymer Systems



Polymer Systems Technology Limited

Unit 2, Network 4, Lincoln Road, Cressex Business Park, High Wycombe, Buckinghamshire, HP12 3RF

www.silicone-polymers.com

Tel: +44 (0) 1494 446610

Email: sales@silicone-polymers.co.uk

BIOMATERIALS IMPLANT LINE

Vulcanization

Cure of the blended elastomer is accelerated by heat. The pre-measured catalyst gives the stock a fixed cure rate. Do not attempt to change molding times by mixing the two components in any other than a 1:1 ratio, as this will change the properties of the elastomer. Only adjusting the temperature may vary the rate of cure.

Cure Inhibition

The cure may be inhibited by traces of amines, sulfur, nitrogen oxide, organotin compounds, and carbon monoxide. Because organic rubbers often contain these substances, they should not come in contact with the uncured elastomer. Catalyst residues from silicone RTV elastomers and peroxide cured silicone elastomers may also inhibit the cure.

FDA MASTER FILE

A Master File for MED-4735 has been filed with the U.S. Food and Drug Administration. Customers interested in authorization to reference the Master File must [contact us](#).

REACH COMPLIANCE

Please [contact](#) our Regulatory Compliance department with any questions or for further assistance.

SPECIFICATIONS

Do not use the properties shown in this technical profile as a basis for preparing specifications. Please [contact us](#) for assistance and recommendations in establishing particular specifications.

WARRANTY INFORMATION

The warranty period provided by NuSil Technology LLC (hereinafter "NuSil Technology") is 12 months from the date of shipment when stored below 40°C in original unopened containers. Unless NuSil Technology provides a specific written warranty of fitness for a particular use, NuSil Technology's sole warranty is that the product will meet NuSil Technology's then current specification. NuSil Technology specifically disclaims all other expressed or implied warranties, including, but not limited to, warranties of merchantability and fitness for use. The exclusive remedy and NuSil Technology's sole liability for breach of warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted. NuSil Technology expressly disclaims any liability for incidental or consequential damages.

Post-Curing

Because these materials vulcanize via addition-cure, no residues are present and post-cure is not required for many applications. The user must confirm that press molding or short oven-cures are suitable for any specific application.

WARNINGS ABOUT PRODUCT SAFETY

NuSil Technology believes, to the best of its knowledge, that the information and data contained herein are accurate and reliable. The user is responsible to determine the material's suitability and safety of use. NuSil Technology cannot know each application's specific requirements and hereby notifies the user that it has not tested or determined this material's suitability or safety for use in any application. The user is responsible to adequately test and determine the safety and suitability for their application and NuSil Technology makes no warranty concerning fitness for any use or purpose. NuSil Technology has completed no testing to establish safety of use in any medical application.

NuSil Technology has tested this material only to determine if the product meets the applicable specifications. (Please [contact us](#) for assistance and recommendations when establishing specifications.) When considering the use of NuSil Technology products in a particular application, review the latest Material Safety Data Sheet and [contact us](#) with any questions about product safety information.

Do not use any chemical in a food, drug, cosmetic, or medical application or process until having determined the safety and legality of the use. The user is responsible to meet the requirements of the U.S. Food and Drug Administration (FDA) and any other regulatory agencies. Before handling any other materials mentioned in the text, the user is advised to obtain available product safety information and take the necessary steps to ensure safety of use.

PATENT / INTELLECTUAL PROPERTY WARNING

NuSil Technology disclaims any expressed or implied warranty against the infringement of any domestic or international patent/intellectual property right. NuSil Technology does not warrant the use or sale of the products described herein will not infringe the claims of any domestic or international patent/intellectual property right covering the product itself, its use in combination with other products, or its use in the operation of any process.

©2018 Avantor®, Inc. All rights reserved. Trademarks are owned by Avantor®, Inc., or its affiliates unless otherwise noted.

Polymer Systems Technology Limited

Unit 2, Network 4, Lincoln Road, Cressex Business Park, High Wycombe, Buckinghamshire, HP12 3RF

www.silicone-polymers.com

Tel: +44 (0) 1494 446610

Email: sales@silicone-polymers.co.uk

Milling & Calendering

HCR Silicone Two-Roll Mills

Where Quality meet safety

Introducing the newest innovations in HCR material processing, which range from compact manual sampling benchtop rollers to large-scale production machines. With safety as our highest priority, our newest enhancements to our electric models include **advanced safety features** for operator protection, a multilingual **interactive display screen** for ease of use, new **backlit rollers** for improved visibility, and a **digital milling thickness gauge**. Discover the ideal combination of safety and efficiency with this reliable and precise equipment, an essential addition to enhance your production process.

Safety Features

- Dual-guarded roller opening
- Light Curtain
- Emergency Stop Button
- Reverse operation via two handcontrol
- Machine running state via LED

Polymer Systems Technology Limited
Unit 2, Network 4, Lincoln Road, High Wycombe,
Buckinghamshire, HP12 3RF, UK

www.silicone-polymers.com +44 (0) 1494 446610

